

OPERATION MANUAL

PS-9616 SPEAKER SELECTOR



PASCOM

Contents


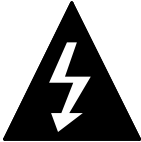

1. Unpacking and Installation	1
2. Features	2
3. Front Panel & Rear Panel Controls	3
4. Applications	5
5. Specifications	5
6. Service	6
7. Warranty	6



Unpacking and Installation

Although it is neither complicated to install nor difficult to operate your set , a few minutes of your time is required to read this manual for a properly wired installation and becoming familiar with its many features and how to use them.

Please take a great care in unpacking our set and do not discard the carton and other packing materials. That may be needed when moving your set and are required if it ever becomes necessary to return your set for service. Never place the unit near radiators, in front of heating vents, excessive humid or dusty location to avoid early damage and for your years quality use. Connect your complementary component as illustrated in the following page.

 <p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	 <p>This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
<p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS IN SIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
<p>WARNING</p>	<p>Caution : To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.</p>
<p>To prevent fire or shock hazard, do not expose the unit to rain or moisture.</p>	<p>Attentions : Pour prevenir les chocs electriques ne pas utiliser cette fuche polarisee avec un prolongateur, une prise de courant on une autre soruie de courant, sauf si les lames peuvent etre inserees a fond sans en laisser aucune partie a decouvert.</p>

Features

- 16 ZONE SPEAKER SELECTOR (ALL CALL, GROUP 1, GROUP 2, CH1~16)

19 push type selector switches are provided to enable you to select 16 zone speakers individually or totally.

- EASY CONFIRMING

You can confirm selected zone and the operating mode of system by using label holder and indicating LED on the front panel.


- ALL CALL SWITCH

You can select all zone speakers use by this switch.

- GROUP 1, GROUP 2 SWITCH

You can select Group 1 speakers(CH1~8) or Group 2 speakers (CH9~16)by these switches.

Front Panel & Rear Panel Controls

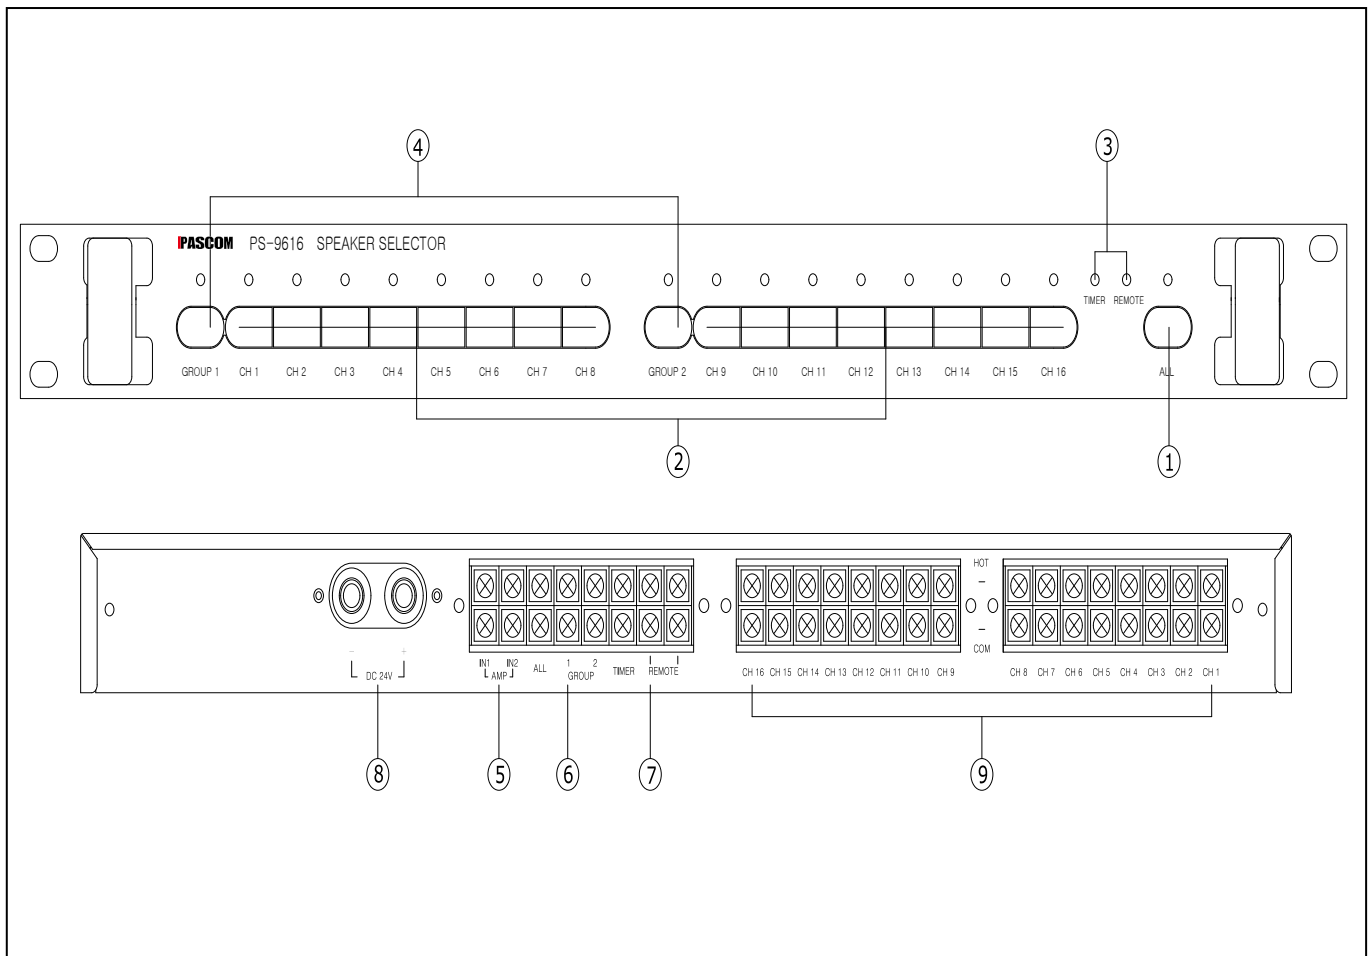

1. ALL CALL SWITCH

You can select the all speakers at a time by using this switch.

2. 1-16 SPEAKER SELECTOR SWITCH

You can select the Group 1 speakers or Group 2 speakers at a time by using these switches.

3. OPERATING MODE INDICATORS

These indicators show operating modes of system.

TIMER: It shows that the system is operated by timer.

REMOTE: It shows that the system is operated by remote control equipment.

4. GROUP 1, GROUP 2 SWITCH

You can select the Group 1 speakers or Group 2 speakers at a time by using these switches.

SPEAKER SELECTOR

5. AMP INPUT TERMINALS

These terminals are for connection to speaker output (100V line) of power amplifier. Be careful not to change the Hot and Common lines.

6. REMOTE CONTROL TERMINALS (ALL, GROUP 1, GROUP 2)

You can select the all speakers, Group 1 speakers or Group 2 speakers by these remote control terminals.

7. TIMER, REMOTE CONTROL INDICATOR TERMINALS

These terminals are for connection to indicator output terminals of timer or remote control equipment.


8. DC INPUT TERMINALS

These terminals are for connection to DC 24V power source which is used for indicating LED.

9. 16 SPEAKER OUTPUT TERMINALS

These terminals are for connection of speaker lines to deliver power output to speakers. Be careful not to change the Hot and Common lines.

Applications

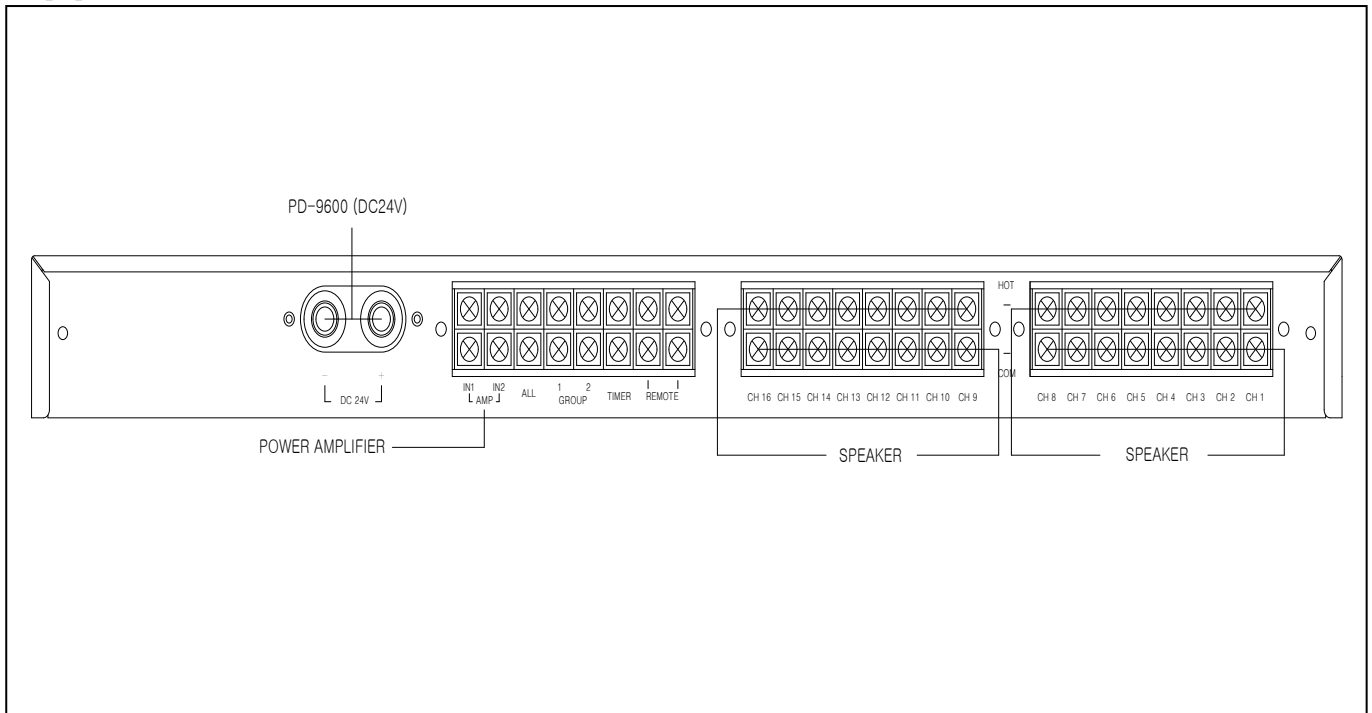

Specifications

- ELECTRICAL

Speaker Selection ----- 16 Channels, All Call, Group 1, Group 2
 Indicator ----- 16 Channels, All Call, Group 1, Group 2
 Timer Mode, Remote Mode

- GENERAL

Power Source ----- DC 24V for LED
 Dimensions ----- 482(W)× 44(H)× 280(D) mm
 Weight (Net) ----- 4.5 Kg

Note : Specifications and design subject to change without notice.

Service

Procedures

Ensure the problem is not related to operator error, or system devices that are external to this unit. Information provided in the troubleshooting portion of this manual may help with this process. Once it is certain that the problem is related to the product contact your warranty provider as described in the warranty section of this manual.

Schematic

A Schematic is available by contacting your warranty provider.

Parts List

A Parts List is available by contacting your warranty provider.

Warranty

Warranty terms and conditions vary by country and may not be the same for all products. Terms and conditions of warranty for a given product may be determined first by locating the appropriate country which the product was purchased in, then by locating the product type. To obtain specific warranty information and available service locations contact PASCOS directly in Korea or the authorized PASCOS Distributor for your specific country or region.

I PASCOM